


WINDSCREEN

WINDSCREEN

REMOVAL

Remove the four screws and windscreen covers.
Remove the four bolts, collars and plastic washers.
Remove the windscreen and rubbers.

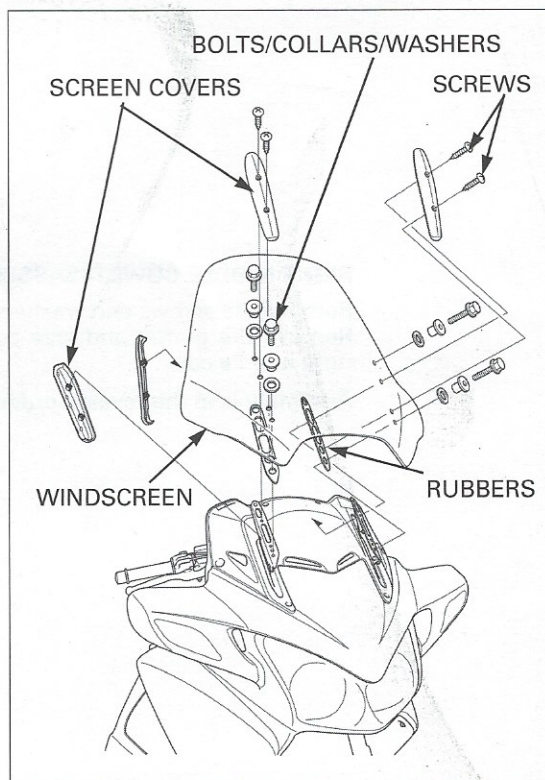

Remove the four nuts and windscreen brackets.

